


Installation Guide


Sandcast Bronze Rustic Modern Rectangular -Passage & Dummy

EMTEK®


1. Install Lock Body 2. Install outside plate

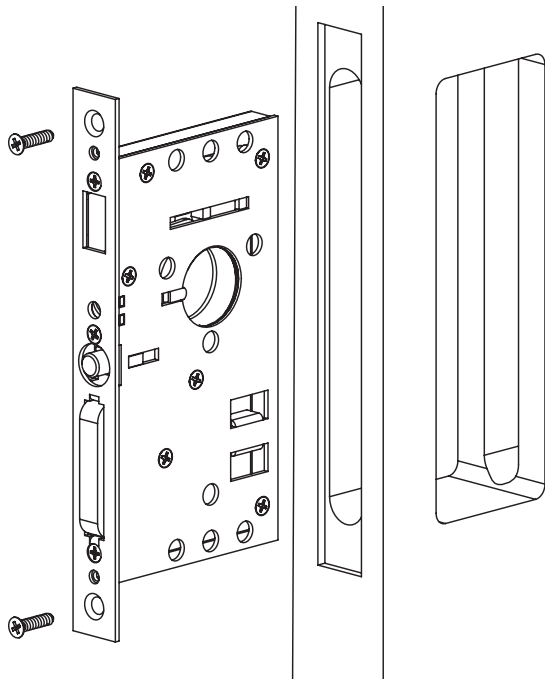

2. Install outside plate

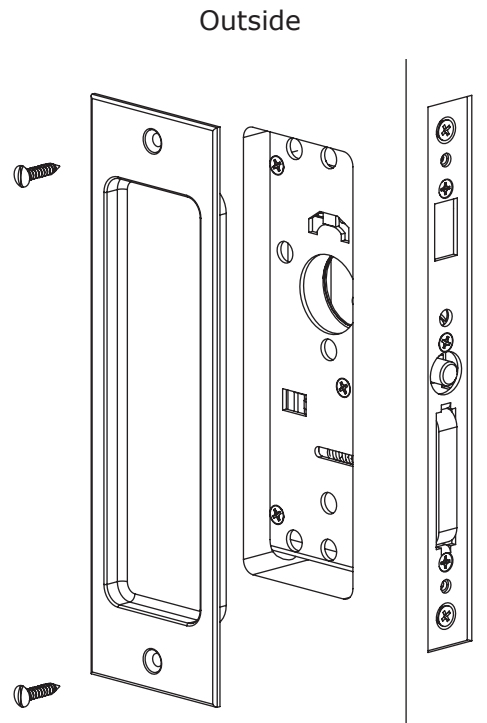

3. Install inside plate 4. Install door jamb

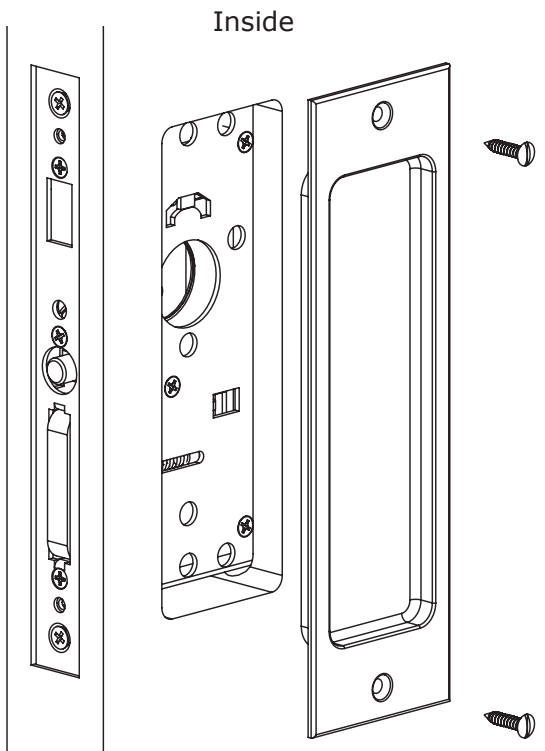

4. Install door jamb

