



Exploded view

Plate & Handle style will vary with model

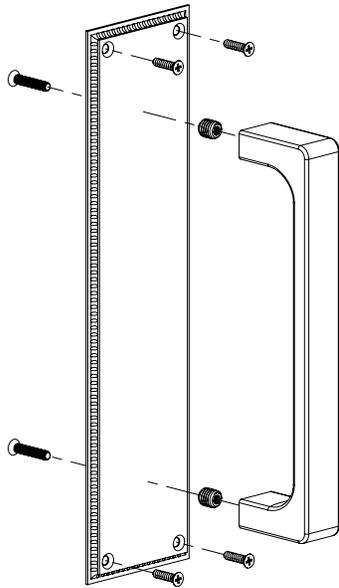


1. Install Insert Screws

Use flat head screwdriver to install 3/8-16" threaded inserts (provided) flush to handle

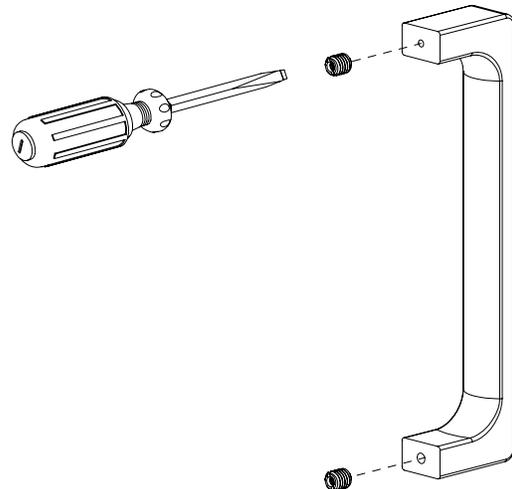


Note: Threaded insert pairs are provided with 8-32 & 1/4-20 internal threads to be used with corresponding screw size.

2. Install Thru Bolts

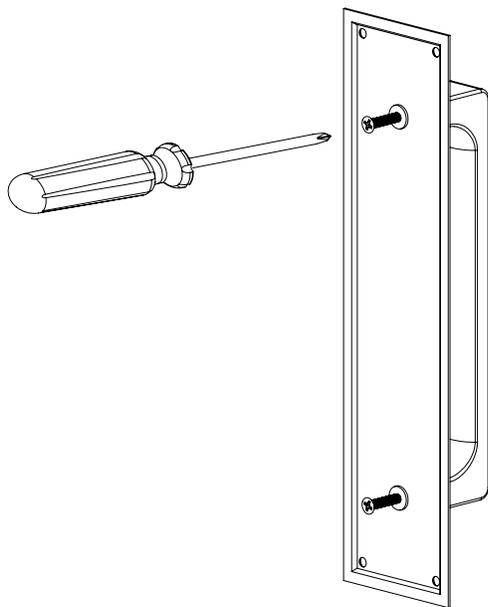

Use #2 Phillips screw driver to fasten plate to handle using #8-32 or 1/4-20 machine screws (provided).

3. Install Pull on door

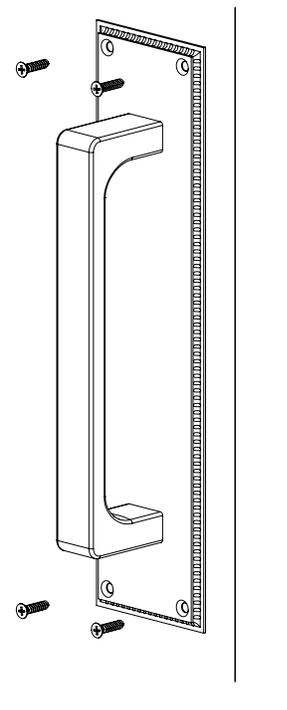

Position Door Pull on door and secure with wood screws (provided).