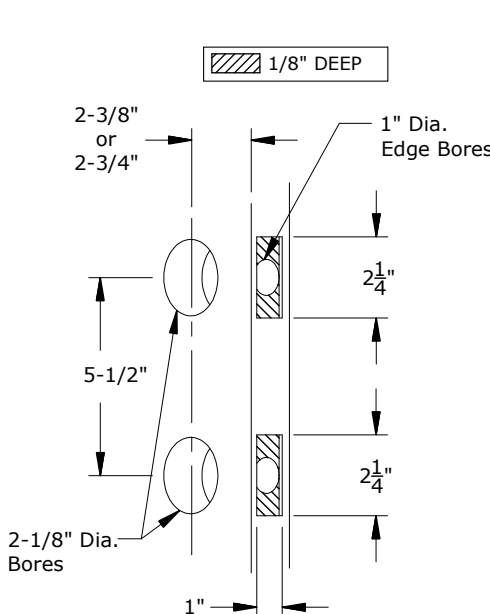
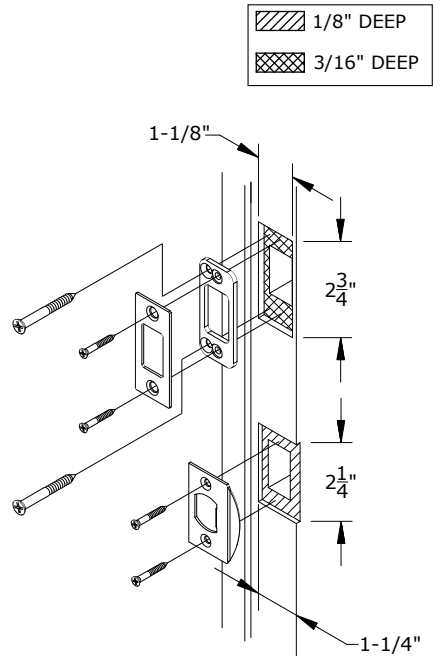
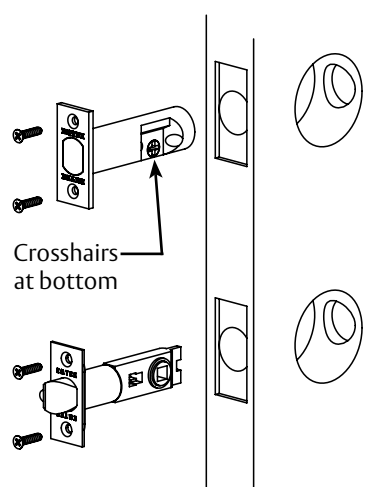
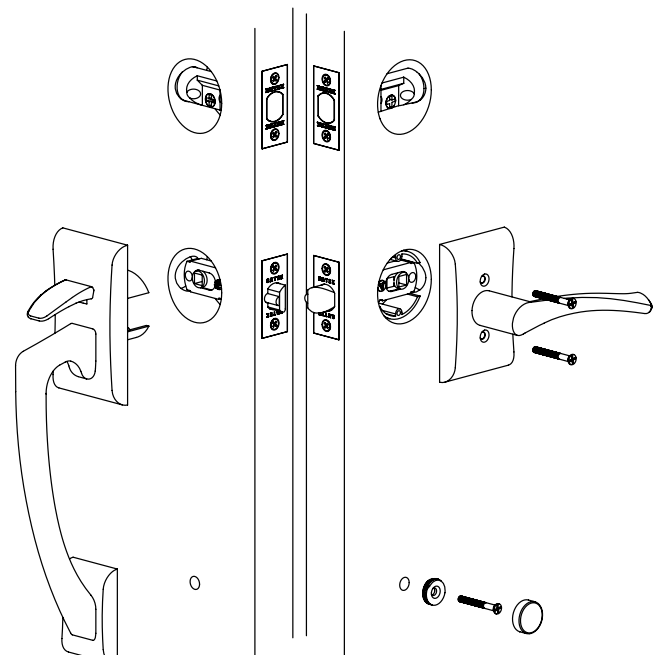


Installation Guide - Electronic Keypad Entry Set

1. Door Prep	2. Door Jamb Prep	3. Install Latches
 1/8" DEEP 2-3/8" or 2-3/4" 1" Dia. Edge Bores 2 1/4" 5-1/2" 2-1/8" Dia. Bores 1"	 1/8" DEEP 3/16" DEEP 1-1/8" 2 3/4" 2 1/4" 1-1/4"	 Crosshairs at bottom
4. Install Grip and Interior Lever	5. Install Electronic Lock	
Handles and Lever/knob vary depending on style	Electronic Deadbolt varies depending on style	
	Install Electronic Deadbolt per installation and programming guide (provided). 